




PN43-751-24U I PN50-751-24U I PN55-751-24U I PN65-751-24U **INCLUDED ACCESSORIES**



Voice Remote and two AAA batteries




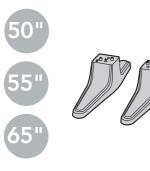

M4 screws (20 mm length)

Stands

 M5 screws (17 mm length) (4 pcs.)



(4 pcs.)

IMPORTANT: See the installation instructions and online User Guide before connecting the power cord.

FIND YOUR USER GUIDE ONLINE!

Go to www.usca.pioneer-tv.com and search for PN43-751-24U | PN50-751-24U | PN55-751-24U | PN65-751-24U.

WHAT YOU NEED (not included)



Phillips screwdriver

ૻૺૺૼૼૼ

Internet connection (wired or wireless) *

*Subscription or other payment may be required to access certain content.



STOP Before using your new product, read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.




XUNOTV

START HERE

How do I attach the stands to my TV? (not for wall mounting) Carefully place your TV

face-down on a cushioned, clean surface. Use a Phillips screwdriver to secure each TV stand to the bottom of your TV with two of the provided screws. The stands are labeled **R** (right) and **L** (left).

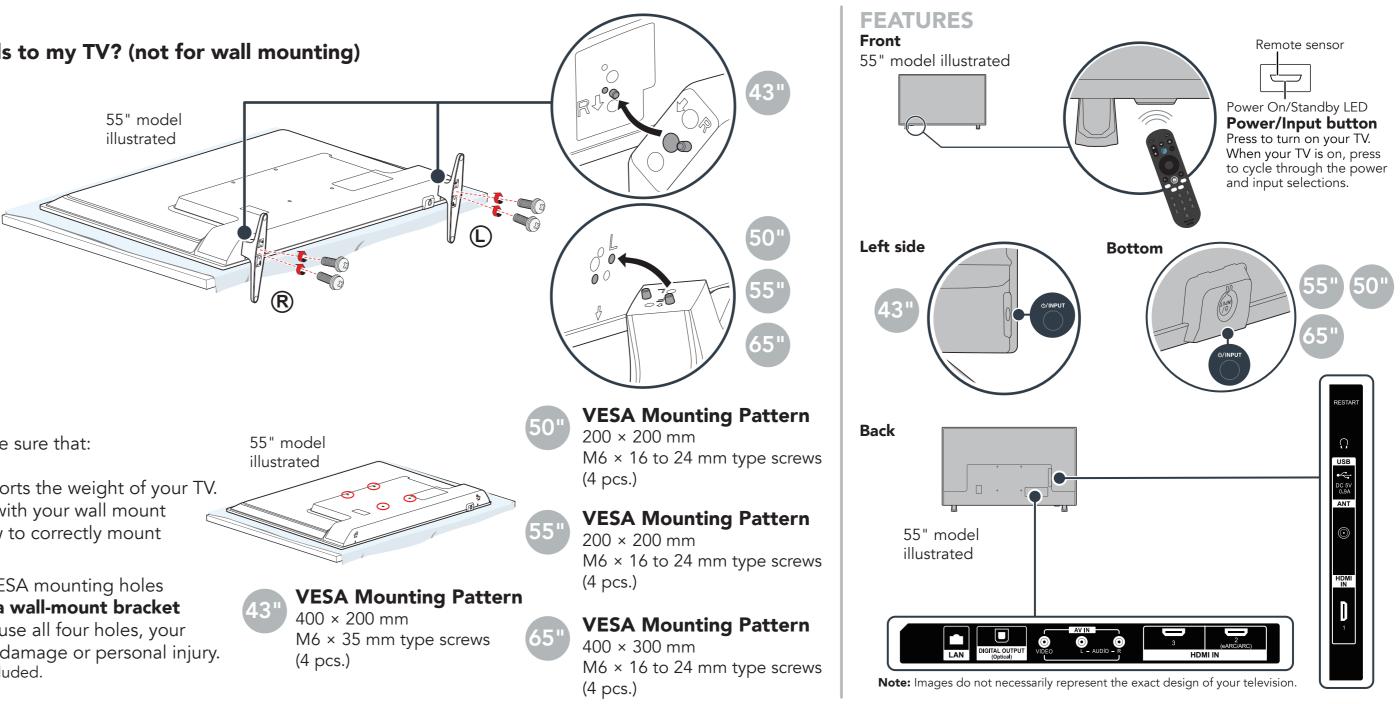


WALL MOUNT

- Before you mount your TV, make sure that:
- You remove the stands.

• The wall-mount bracket supports the weight of your TV. See the instructions that came with your wall mount for more information about how to correctly mount your TV.

WARNING: Your TV has four VESA mounting holes on the back. You must secure a wall-mount bracket to all four holes. If you do not use all four holes, your TV may fall and cause property damage or personal injury. Note: Wall-mount screws are not included.

MAKING CONNECTIONS

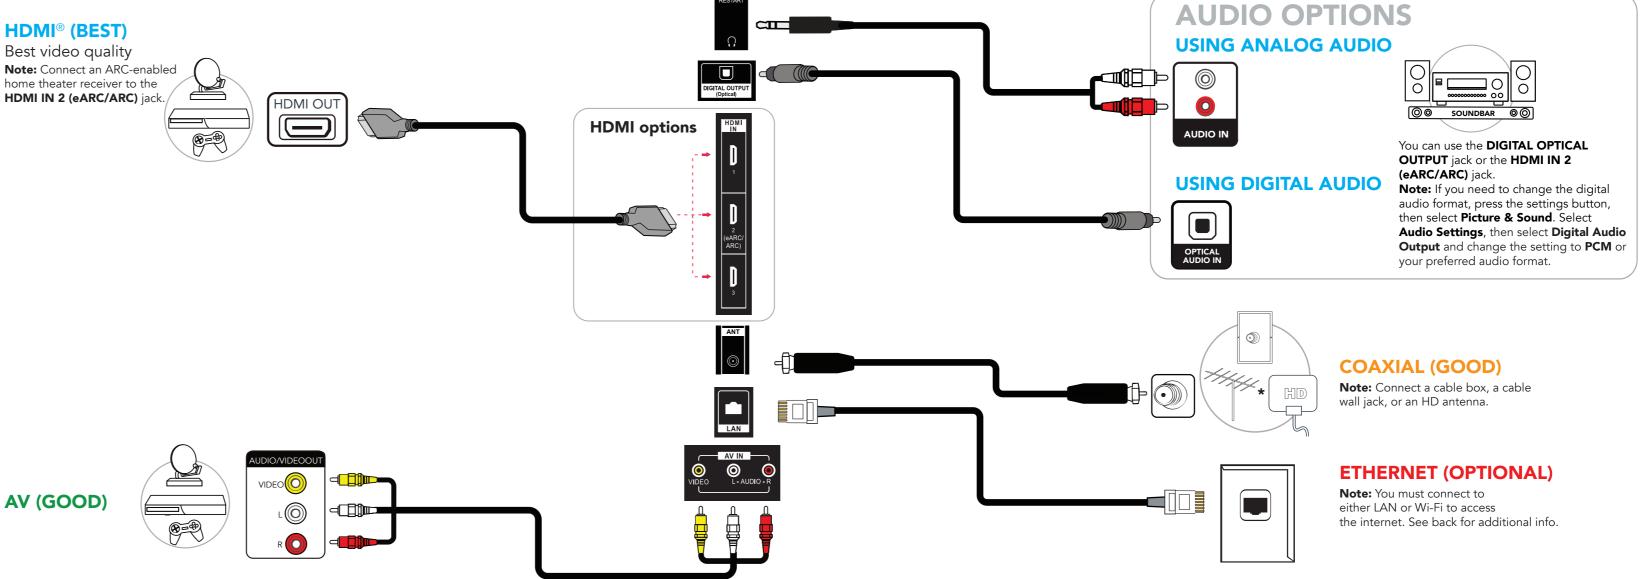

AV (GOOD)

 


- - - -

QUICK SETUP GUIDE 43"/ 50"/ 55"/ 65" LED TV / **4K ULTRA HD**

How do I watch TV (cable, satellite, or antenna) or connect a device such as a DVD or Blu-ray disc player or game console? How do I connect to the internet?










TURNING ON MY TV

When can I turn on my TV?

WHEN YOUR TV IS IN PLACE:

 1 Plug the power cord into the **AC IN** jack on the back of your TV, then plug the other end into a power outlet.



2 Remove the remote control cover and install the batteries.



- 3 Press Power on your Voice Remote.
- **4** Follow the on-screen instructions.

COMPLETE WI-FI SETUP

How do I complete Wi-Fi setup?

Your TV will guide you through the rest of the setup process with on-screen prompts. Once you're done, you'll be directed to the home screen.

If you'd like to connect your TV to the Internet (recommended).

- **1** Connect your TV to your Wi-Fi network using your Wi-Fi network name (SSID) and password OR an Ethernet cord.
- 2 Once the activation code is displayed on the TV screen, go to the website link indicated using a mobile device, a computer, or a tablet, and create your Xumo TV account with a payment method if you would like to make purchases on your TV.

Note: Xumo TV account is optional.

 
After you've set up your TV, you will be automatically directed to the home screen.

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No user-serviceable parts are inside. Refer servicing to gualified service technicians.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your TV. This label is located on the back of your TV.

This symbol indicates that there are important operating and maintenance




SERVICING

Servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

instructions in the literature

USING YOUR VOICE REMOTE

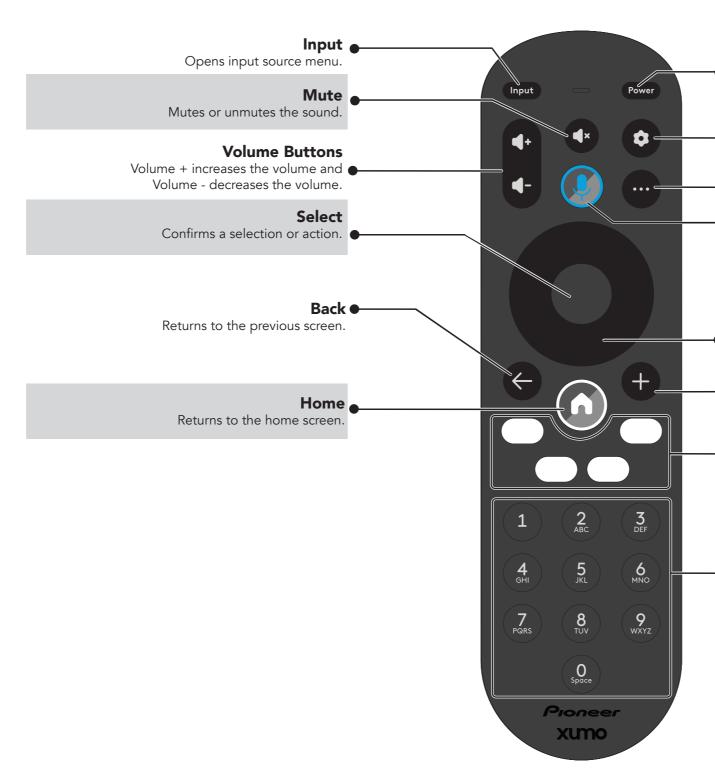





CREATING XUMO TV ACCOUNT 5

Do I need a Xumo TV account?

You don't need an account to use your Xumo TV, but without it you won't be able to make purchases through your TV, and you may miss out on special offers like free trials.

You can also use your Xumo TV account to manage your preferences, subscriptions, and paired devices.

How do I create my Xumo TV account?

You'll be prompted to create an Xumo TV account when you set up your TV. All you need is an email and password. You'll also need to add a credit or debit card as your payment method to make purchases on your TV.

Can I use the same Xumo TV account for multiple TVs?

Yes! You can link multiple TVs to the same Xumo TV account. Just sign in with your Xumo account.

Power Turns TV power on or off. When your TV is off, the LED indicator on the front of your TV is lit.

- Settings Activates quick settings overlay.
- More Press to display more information about the content.

Voice control Search across your apps and control your TV with just your voice - just press and hold the button, say a command, then release it.

- Navigation
- Use for on-screen navigation up, down, left, and right.
- Add Add content to my list.

Partner Buttons

Launches the designated app from any screen, or when your TV is off.

Numbers

Enter channel numbers or the parental control password.





The Joy of Streaming[™]with Xumo TV **ENDLESS STREAMING**

Enjoy watching all the top apps like Netflix, YouTube, Disney+, Amazon Prime Video, Peacock and more. And with Xumo Play, you'll have quick access to 300+ free channels, available to stream immediately.

MY LIST

No more scrolling through endless lists or trying to remember that one movie you've been meaning to watch. My List keeps everything together, so you spend less time searching within apps.

SUPER SIMPLE TO USE

Intuitive navigation. Set up and watch in minutes. Included voice remote lets you use your voice to search.

Access the online User Guide

Go to <u>www.usca.pioneer-tv.com</u> and search for your model number. Many questions regarding parts, service, and warranties can be answered by visiting the Support section of our website: www.usca.pioneer-tv.com

Contact Pioneer TV Customer Support Center: 1-888-287-7658 (U.S. or Canada)

Contact Xumo TV Customer Support: https://tv.xumo.com/support





The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby, Dolby Vision, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2022 Dolby Laboratories. All rights reserved.

PIONEER and the Pioneer logo are registered trademarks of Pioneer Corporation, and are used under license

Not all apps and content available in 4K

Available programming and apps subject to change at any time; see tv.xumo.com for currently available apps. Not all programming and apps available in all areas. Separate subscriptions required to access various apps, including Netflix, Apple TV+, Youtube, Disney+, Hulu, Peacock, Max and Spotify.

HD, 4K, Dolby Vision, Dolby Atmos and HDR10 availability subject to internet service, network conditions, device capabilities and content availability. All product names, trademarks, logos and brands are the property of their respective owners. The availability and performance of applications and content in this TV vary from country to country and your subscription plan and are subject to change over time. Please verify availability in your intended use location prior to purchasing. Xumo TV, Xumo Play, the Xumo logos, and all other Xumo product names, logos, slogans or marks are the trademarks of Xurno or its licensors. ©2023 Xumo. All Rights Reserved.

Distributed and warranted by Best Buy Purchasing LLC 7601 Penn Avenue South, Richfield, MN 55423 USA ©2023 Best Buy. All rights reserved.

V3 ENGLISH 23-0310

